
(8) DRILL AND TAP SHAFT FOR 5/8" WIRE GUIDE HOLE - ADD INSULINER

ISOMETRIC VIEW

(METAL POLE SHOWN)

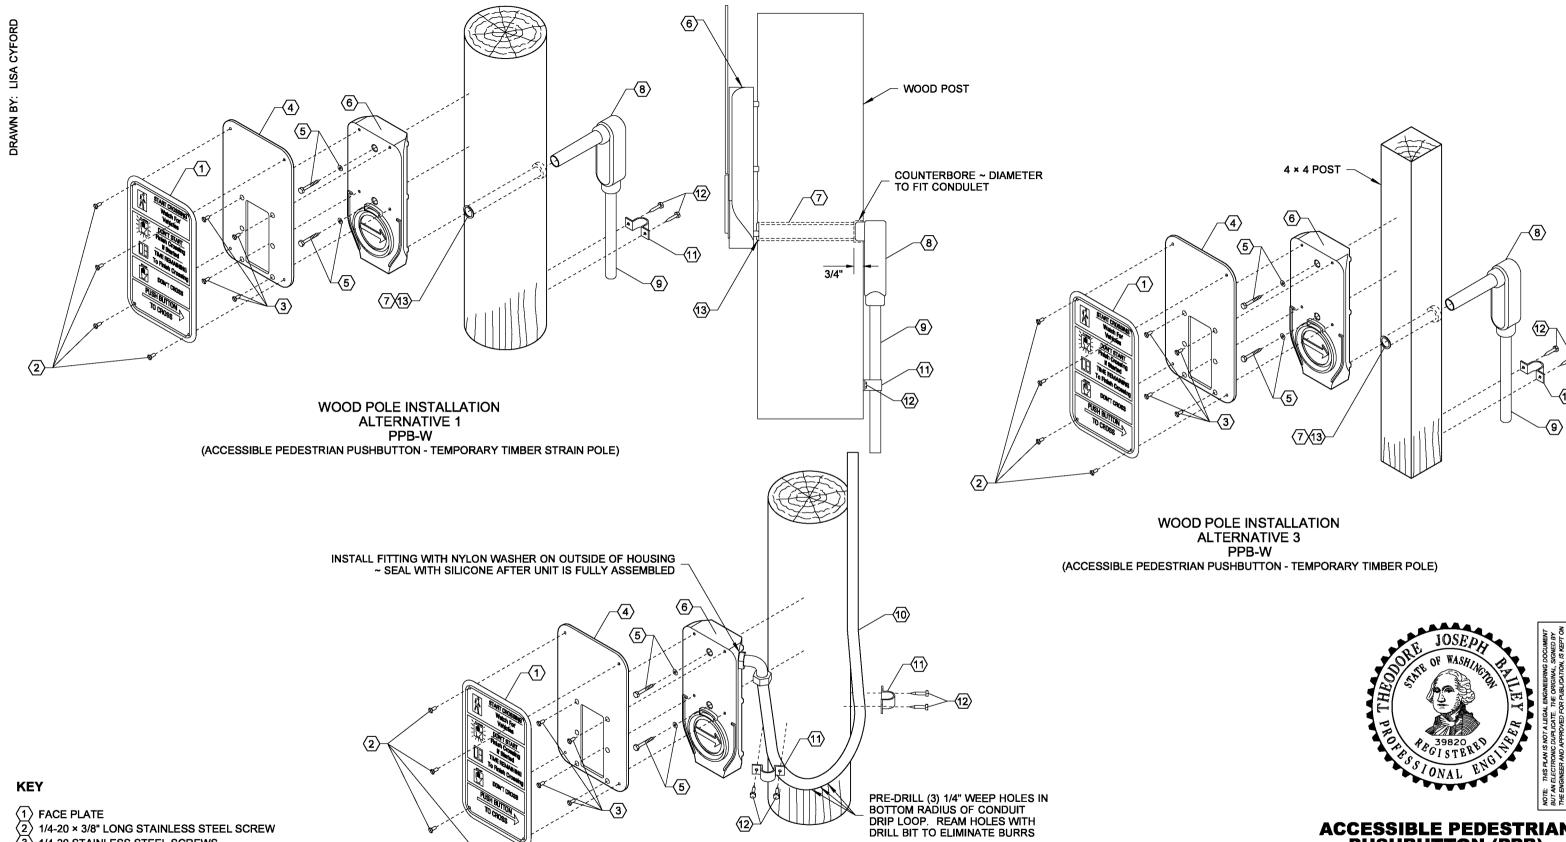

- 1 FACE PLATE
- 2 1/4-20 × 3/8" LONG STAINLESS STEEL SCREW
 3 1/4-20 STAINLESS STEEL SCREWS
- 4 PUSHBUTTON FRAME ADAPTER
- (5) LAG BOLT WITH WASHER
- 6 PUSHBUTTON STATION
- CONDUIT DIAMETER + 1/8" HOLE THRU POLE
- 8 CONDULET
- (9) 3/4" CONDUIT
- (10) LIQUID-TITE FLEX CONDUIT
- (11) ONE PIECE TWO HOLE CLAMP
- (12) LAG BOLT
- 13 INSULINER SLEEVE

ACCESSIBLE PEDESTRIAN SIGNAL (ASP) ASSEMBLY

WOOD POLE INSTALLATION **ALTERNATIVE 2** PPB-W

(ACCESSIBLE PEDESTRIAN PUSHBUTTON - TEMPORARY TIMBER STRAIN POLE)

TEMPORARY TIMBER POLE



STANDARD PLAN J-20.26-01 SHEET 2 OF 2 SHEETS

APPROVED FOR PUBLICATION

Pasco Bakotich III

